

## Declaration of Conformity as per Directive 97/23/EC and Manufacturer`s Declaration as per Directive 98/37/EC

The manufacturer	<b>Pfeiffer Chemie-Armaturenbau GmbH, 47906 Kempen, Germany</b>
declares that:	<b>Angle seat valves Series 42a with packing</b> <ul style="list-style-type: none"> <li>• with pneumatic/electric/hydraulic actuator</li> <li>• with free shaft end for subsequent mounting of an actuator</li> </ul>
<ol style="list-style-type: none"> <li>1. The valves are pressure accessories within the meaning of the Pressure Equipment Directive 97/23/EC and conform with the requirements of this Directive,</li> <li>2. The valves are not complete machinery within the meaning of the Machinery Directive 98/37/EC, but meet the relevant requirements of this Directive,</li> <li>3. They may only be operated observing the operating instructions &lt;BA42a-01_EN&gt; delivered together with the valve.</li> </ol> <p>The commissioning of these valves is only permitted after the valve has been installed from both sides in the pipeline and a risk of injury can be ruled out.</p>	

*Applied standards:*

<b>AD 2000 Regulations DIN-EN 292-2000</b>	<b>Regulations for pressurized valve body parts Safety of Machinery, Part 2: Technical requirements</b>
--	---

*Type designation and technical features:*

Pfeiffer data sheets <TB42a_EN> <i>NOTE: This Manufacturer's Declaration applies to all valve types listed in this catalog.</i>
--

*Applied conformity assessment procedure:*

<b>Conforming to Annex II of the Pressure Equipment Directive 97/23/EC, Module H</b>
--

<i>Name of notified body:</i>	<i>Identification number of the notified body:</i>
<b>TÜV Rheinland Service GmbH</b> Am Grauen Stein 51101 Köln Germany	<b>0035</b>

These Declarations become invalid when modifications are made to the Angle seat valves and/or assemblies that affect the technical data of the Angle seat valve or the <Intended use> described in section 1 of the operating instructions, and considerably change the valve or an assembly delivered with it.

Kempen, 18. June 2009

Lorenz Stolzenberg, Managing Director

These Declaration of Conformity and operating instructions have been generated electronically and are legally binding without signature

# Operating instructions

## Angle seat valve actuated


### Contents

<b>0</b>	<b>Introduction</b>	<b>3</b>
<b>1</b>	<b>Intended use</b>	<b>3</b>
<b>2</b>	<b>Safety instructions</b>	<b>3</b>
2.1	General safety instructions	3
2.2	Safety instructions for the operator	3
2.3	Particular hazards	4
2.4	Designation of the Angle seat valve	4
<b>3</b>	<b>Transport and storage</b>	<b>5</b>
<b>4</b>	<b>Installation in the pipeline</b>	<b>5</b>
4.1	General	5
4.2	Installation instructions	5
<b>5</b>	<b>Pressure check in pipeline section</b>	<b>6</b>
<b>6</b>	<b>Standard operation and maintenance</b>	<b>6</b>
<b>7</b>	<b>Troubleshooting</b>	<b>7</b>
<b>8</b>	<b>Further information</b>	<b>8</b>

## 0 Introduction

These instructions are designed to assist the user during installation, operation and maintenance of Angle seat valves from the **Series 42a**.


These instructions apply only to the Angle seat valve itself. In addition, refer to the instructions of the mounted actuator.

 <b>Note</b>	<p>The <b>WARNING</b> and <b>CAUTION</b> notes must be strictly adhered to. <b>Otherwise this may lead to personal injury and equipment damage</b> and the manufacturer's warranty may become void.  Please contact the manufacturer if you have any queries, see section 8 for contact address.</p>
--	--


## 1 Intended use

After installing the valve in the pipeline and connecting the actuator to the control equipment, these Angle seat valves are designed exclusively for shutting off or controlling media within the permissible pressure and temperature ranges.

The permissible pressure and temperature ranges for these Angle seat valves are specified in the data sheets <TB42a\_EN>.

 <b>Danger</b>	<p>Do not operate a Angle seat valve when its permissible pressure/temperature rating is not sized for the operating conditions specified in the data sheets &lt;TB42a_EN&gt;.  <b>Failure to follow these safety precautions may result in personal injury and can damage equipment installed in the pipeline.</b></p>
--	---

### Interpretation of declaration to the Directive 94/9/EC

 <b>Note</b>	<p>Pfeiffer valves have no own potential ignition source after testing the hazardous ignition in accordance to DIN EN 13463-1:2002. Therefore Pfeiffer valves do not come under the directive 94/9/EC.  <b>Relating to this directive a CE-marking is not permissible.</b>  The valve could be incorporated into potential compensation of plants independent of the directive, valid for metallic parts in hazardous areas.</p>
--	--

Observe the restrictions in the specified data sheets if the Angle seat valve is intended for throttling services. Observance of section 2 <Safety instructions> is presumed for the Intended use.

## 2 Safety instructions

### 2.1 General safety instructions


For Angle seat valves, the same safety regulations apply as for the pipelines in which they are installed, as well as for the control equipment connected to the actuator. These instructions only specify those safety instructions which need to be additionally observed concerning Angle seat valves.

Additional safety instructions are specified in the instructions for the actuator assemblies.

### 2.2 Safety instructions for the operator

The manufacturer does not assume any responsibility. Therefore, on using the Angle seat valve, make sure the following instructions are observed:

⇒ The valve is to be used only for its intended use as described in section 1.







 <b>Warning</b>	<p><b>Preventing misuse of the Angle seat valve:</b>  It is especially important to make sure that the selected materials for wetted parts in the Angle seat valve is suitable for the media used as well as the prevailing pressures and temperatures.  <b>Failure to follow these safety precautions may result in personal injury and can damage equipment installed in the pipeline. The manufacturer does not assume any final responsibility.</b></p>
---	---

⇒ Make sure that the pipeline and control equipment have been installed correctly and are checked at regular intervals. The valve body wall thickness must be designed to take into account an additional load  $F_z$  in the usual order ( $F_z = \pi/4 \cdot DN^2 \cdot PS$ ) for a correctly sized pipeline.

⇒ Angle seat valves that are operated at temperatures greater than +50°C or lower than -20°C must be protected, together with the pipeline connections, against being touched.

- ⇒ The valve needs to be connected correctly to the pipeline and to the control equipment.
- ⇒ Make sure the usual flow velocities are not exceeded in continuous service in this pipeline. Exceptional operating conditions such as oscillations, water hammering, cavitation and large proportions of solid matter in the process medium, especially abrasive, must be clarified beforehand with the manufacturer.
- ⇒ An actuator unit mounted subsequently onto the valve must fit the Angle seat valve properly and its final positions, especially the closed position, need to be correctly adjusted.
- ⇒ The valve should only be operated and serviced by personnel appropriately qualified for pressurized pipelines.

### 2.3 Particular hazards

 <b>Danger</b>	The shaft is sealed with a stuffing box packing. Prior to unscrewing the stuffing box gland, <b>relieve pressure entirely in the pipeline</b> to ensure the process medium cannot escape uncontrollably from the stuffing box packing.
 <b>Danger</b>	Prior to removing the Angle seat valve from the pipeline, <b>relieve pressure entirely in the pipeline</b> to ensure the process medium cannot escape uncontrollably from the pipeline.
 <b>Warning</b>	Should it be necessary to remove a Angle seat valve from the pipeline, process medium may escape from the pipe or out of the Angle seat valve. In the case of process media that can damage health or are dangerous, drain the pipeline completely before removing the Angle seat valve from the pipeline. Take special care concerning <b>any remaining media that may still be in the pipeline or have collected in the cavities of the valve</b> .
 <b>Warning</b>	Only unscrew or loosen any screws or bolts connecting the body parts after the valve has been removed from the pipeline. Tighten the screws on reassembly with a torque wrench according to the instructions <EB42a_EN>.
 <b>Warning</b>	<i>For Angle seat valves intended for dead-end service:</i> During standard operation, in particular, with gases or hot and/or dangerous media, <b>mount a blank flange at the free end connection</b> or ensure that the Angle seat valve is <b>properly protected against unauthorized operation</b> .
 <b>Warning</b>	If a Angle seat valve used for dead-end service must be opened in a pressurized pipeline, special care must be taken to ensure that <b>any process media escaping under pressure</b> do not cause any damage.

### 2.4 Designation of the Angle seat valve

The designation of the Angle seat valve includes the following details:


Details	Designation	Comments
Manufacturer	<b>Pfeiffer</b>	Address, see section 8 <Further information>
Valve type	<b>BR (and number)</b>	e.g. BR 42a = Series 42a, see Pfeiffer catalog
Body material	e.g.: <b>1.4517</b>	Material number acc. to DIN EN 10213-4
Size	<b>DN (and number)</b>	Value in mm, e.g. DN150
Maximum pressure	<b>PN (and number)</b>	Value in bar at room temperature
Perm. temperature	<b>TS (and number)</b>	PS and TS are associated values at maximum permissible operating temperature and maximum permissible operating pressure.
Perm. pressure	<b>PS (and number)</b>	
Serial no.	e.g.: <b>2080153/001/001</b>	 <p>Valve no. within item Item in order Order Year of manufacture (e.g. 208=2008)</p>
Year of manufacture	e.g.: <b>2008</b>	On customer request, the year of manufacture is stamped on the valve.
Conformity	<b>CE</b>	Conformity is certified separately by the manufacturer
Identification no.	<b>0035</b>	Notified body as per EU Directive = TÜV Rheinland Service GmbH
Direction of flow	<b>➔</b>	<b>Note:</b> see note in section 4.2 <Installation instructions>

Table 1 – Designation of the Angle seat valve

Keep the labeling on the valve body and on the nameplate to ensure that the valve can be identified at all times.

### 3 Transport and storage



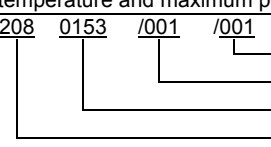

Angle seat valves **with linings must be carefully handled, transported and stored:**

- ⇒ Store the valve with its protective packing and/or with its protective caps in place in the end connections. Store and transport the Angle seat valves that weigh over approx. 10 kg on pallets (or a similar type of support) right up to the point of installation.
- ⇒ Store the valve in a closed room before it is installed. Protect it against damaging influences such as dirt or moisture.
- ⇒ Make sure, in particular, that the actuator and the end connections intended to connect the valve to the pipeline are not damaged through mechanical or other influences.
- ⇒ As a rule, Angle seat valves are delivered in the completely closed position. Store the valves in the condition they were delivered in. Do not operate/activate the actuating device.



### 4 Installation in the pipeline

#### 4.1 General

The same instructions apply for installing the Angle seat valves in the pipeline as for connecting pipes and similar pipeline equipment. The following instructions additionally apply for Angle seat valves. Also observe section 3 for transporting the Angle seat valve to the point of installation.


 <b>Note</b>	The mating flanges must have smooth facings Contact the manufacturer if you intend to use other flange forms.
 <b>Warning</b>	<i>The actuating device is set for the operating data specified in the order.</i> <b>Do not alter the settings for the final positions OPEN and CLOSED</b> without the manufacturer's prior consent.
 <b>Warning</b>	If an actuator unit has been mounted subsequently, torque, direction of rotation, operating angle as well as the final positions <b>OPEN</b> and <b>CLOSED</b> must be adapted to the Angle seat valve. <b>Failure to follow these safety precautions may result in personal injury and can damage equipment installed in the pipeline.</b>
 <b>Warning</b>	<i>Only for Angle seat valves with electric actuator:</i> Make sure that the actuator is switched off in the <b>CLOSED</b> position by the <b>torque switch's signal</b> . In the <b>OPEN</b> position, the actuator must be switched off by the <b>limit switch's signal</b> <i>See the instructions for the electric actuator for further details.</i>

The following warnings are to be observed for actuators:


 <b>Warning</b>	<i>Actuators are not designed to be used as step-ladders:</i> Do not apply any weight/load to the actuators. This can damage or destroy the Angle seat valve.
 <b>Warning</b>	<i>Actuators that weigh more than the Angle seat valve:</i> Support any actuator which due to its size and/or mounting situation would otherwise cause the valve to bend under the load.

#### 4.2 Installation instructions


- ⇒ Transport the valve in its original packaging right up to the point of installation. Remove packaging first at the point of installation to protect it from dirt.
- ⇒ Check valve and actuator for signs of damage that may have occurred during transportation. Do not install a damaged Angle seat valve or actuator.
- ⇒ Make sure that only Angle seat valves are installed when their pressure rating, end connections and face to face dimensions match the conditions of application. See the designation of the Angle seat valve.

 <b>Danger</b>	<p>Do not install a Angle seat valve if its permissible pressure/temperature ranges do not apply to the operating conditions. The limits of application are marked on the valve, see section 2.4 &lt;Designation&gt;. The permissible range is determined in section 1 &lt;Intended use&gt;.</p> <p><b>Failure to follow these safety precautions may result in personal injury and can damage equipment installed in the pipeline.</b></p>
--	---

- ⇒ The connecting specifications for the actuator unit must match those of the control equipment. See nameplate(s) on the actuator unit.
- ⇒ Make sure the end connections of the pipeline are aligned with the Angle seat valve's end connections and their ends have parallel planes.
- ⇒ Prior to installation, carefully clean the valve and the connecting section of the pipeline from dirt, especially hard foreign material.
- ⇒ On inserting the valve (and flange gaskets) into a ready mounted pipeline, keep a certain clearance between the pipeline ends to ensure that all facings (and gaskets) remain undamaged.
- ⇒ The valve can be installed in any position. However, if possible, the actuator should not be located directly underneath the Angle seat valve.
- ⇒ Make sure the arrow on the valve body corresponds with the direction of flow in the pipeline.

 <b>Note</b>	<p>In special cases, it may be necessary for the valve to be tightly shut against the direction of flow. The installation in such special cases <b>must be determined by the operator of the pipeline</b> (e.g. to protect a pump).</p>
--	---

- ⇒ The associated instructions apply for connecting the actuator unit to the control equipment.
- ⇒ After completing installation, carry out a function check using the signals issued by the control equipment. The valve must open and close properly corresponding with the control signals. Any function errors that are recognized must be remedied before commissioning. See also section 7 <Troubleshooting>.

 <b>Warning</b>	<p>Control commands that are not carried out correctly <b>may result in personal injury and can damage equipment installed in the pipeline.</b></p>
---	---

## 5 Pressure check in pipeline section

The pressure check of valves has already been carried out by the manufacturer. To check the pressure of a section of pipeline with installed valves, the following points must be observed:

- ⇒ Carefully flush newly installed pipes to remove any foreign material.
- ⇒ **Valve OPEN:** The test pressure should not exceed the value **1.5 x PN** (see nameplate).
- ⇒ **Valve CLOSED:** The test pressure should not exceed the value **1.1 x PN** (see nameplate).


If a valve leaks, proceed as described in section 7 <Troubleshooting>.



## 6 Standard operation and maintenance

- ⇒ Operate the valve/actuator unit over the control equipment signals. Angle seat valves delivered with the actuator already mounted are precisely set and should not be readjusted.
- ⇒ Normal manual force is sufficient to operate the manual override on the actuator (if required). It is not permissible to use extensions to increase the operating torque.
- ⇒ Regular maintenance work on the Angle seat valves is not necessary. The operating shaft with Graphite-meshwork pack sealing is pre-loaded with a compression spacer and must only be adjusted when required.
- ⇒ If a valve leaks, proceed as described in section 7 <Troubleshooting>.

## 7 Troubleshooting

Observe the safety instructions listed in section 2 on troubleshooting.

 <b>Warning</b>	<p>To remove a valve from a pipeline containing dangerous media and to take it out of the plant: Decontaminate the valves properly first.</p>
---	---

Type of fault	Action to be taken	Comment
Leak at the connection to the pipeline	<p>Tighten flange bolts.</p> <p><i>If the medium leaks out at the flanges even after tightening the flange bolts:</i> Remove the valve (observing the instructions in section 2.3 &lt;Particular hazards&gt;) and replace the gaskets.</p>	
Leak at the connection between valve body parts	<p>Tighten bolts/screws with a torque wrench, see Pfeiffer repair instructions &lt;EB42a_EN&gt;</p> <p><i>If the valve still leaks:</i> Remove the valve (observing the instructions in section 2.3 &lt;Particular hazards&gt;) and replace the gaskets. Contact Pfeiffer for spare parts and necessary instructions.</p>	
Leak at the stuffing box packing	<p>Alternately tighten both bolts at the stuffing box gland by turning them clockwise (in steps of 1/4 turns) until the leakage stops.</p> <p><i>If the valve still leaks:</i> The valve must be repaired. Contact Pfeiffer for spare parts and necessary instructions.</p> <p><i>On loosening or unscrewing the nuts at the stuffing box gland (counterclockwise):</i></p> <p style="text-align: center;"></p> <p><b>Danger</b> To protect the operator, relieve pressure entirely in the pipeline upstream and downstream of the valve prior to loosening the nuts. Observe instructions in section 2.3 &lt;Particular hazards&gt;.</p>	<p><b>Note 1:</b> <i>When ordering spare parts, include all the specifications listed in the valve designation. Only use original parts from Pfeiffer.</i></p> <p><b>Note 2:</b> <i>If, after removing the valve from the pipeline, it is found that the body and/or internal parts are not sufficiently resistant to the process medium, select parts made of a suitable material.</i></p>
No tight shut-off when the valve is closed	<p>Remove the valve (observing the instructions in section 2.3 &lt;Particular hazards&gt;) and check it.</p> <p><i>If the valve is damaged:</i> If it must be repaired, remove the valve, observing section 2.3 &lt;Particular hazards&gt;. Contact Pfeiffer for spare parts and necessary instructions.</p>	
Malfunction	<p>Check actuator unit and control signals</p> <p><i>If actuator and control equipment are in order:</i> Remove the valve (observing the instructions in section 2.3 &lt;Particular hazards&gt;) and check it.</p> <p><i>If the valve is damaged:</i> If it must be repaired, remove the valve, observing section 2.3 &lt;Particular hazards&gt;. Contact Pfeiffer for spare parts and necessary instructions.</p>	
If a pneumatic actuator with springs must be removed from the valve	<p style="text-align: center;"></p> <p><b>Caution: Risk of injury</b> Before removing the actuator from the valve, disconnect the signal pressure.</p>	

For malfunctioning actuator units, refer to the actuator instructions.

## 8 Further information

Contact the address below for the listed <Data sheets> and <Repair instructions> as well as further information.

**Pfeiffer Chemie-Armaturenbau GmbH**

Hooghe Weg 41 • 47906 Kempen

Phone: +49 21 52 20 05 - 0 • Fax +49 21 52 15 80

E-Mail: [vertrieb@pfeiffer-armaturen.com](mailto:vertrieb@pfeiffer-armaturen.com) • Internet: [www.pfeiffer-armaturen.com](http://www.pfeiffer-armaturen.com)

**Pfeiffer Chemie-Armaturenbau GmbH**

Hooghe Weg 41 • 47906 Kempen

Telefon: 02152 / 2005-0 • Telefax: 02152 / 1580

E-Mail: [vertrieb@pfeiffer-armaturen.com](mailto:vertrieb@pfeiffer-armaturen.com) • Internet: [www.pfeiffer-armaturen.com](http://www.pfeiffer-armaturen.com)